

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

IMPORTANT SAFETY INSTRUCTION

WARNING - Lighted lamp is HOT!

To reduce the risk of FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

- Turn off/unplug and allow to cool before replacing bulb, cleaning or other maintenance.
- Do not touch hot/warm bulb at any time.
- Do not look directly at lighted bulb.
- Keep lamp away from materials that may burn.
- Bulb and shade can get HOT! Touch only switch/plug when turning on. Touch only neck when adjusting lit lamp.
- Use only with a 13W type PL bulb.

ASSEMBLY INSTRUCTIONS

1. The lamp comes fully assembled with the bulb installed.
2. Adjust lamp shade of desired position.
3. Plug into outlet and turn on the rocker on/off switch and enjoy.
4. Please see section A below if the lamp does not turn on.

BULB REPLACEMENT

Please follow this instruction manual before assembling the lamp for initial use, and for bulb replacing.

- A. If the bulb fails to light for the first use, it may be the result of loose contact between bulb and socket, please disconnect the power cord.
1. Pull and twist the shade (B) from cup (A) AS SHOWN IN THE FIGURE 1.
 2. Remove the bulb and push it back into the socket. If the bulb is loose, please push the end of the bulb into the socket until it is firmly locked.
 3. Place the shade (B) back onto the cup.
- B. To replace bulb, please:
1. Use 13 watt PL-type bulb only. (See Note below)
 2. Disconnect the power cord before replacing bulb.
 3. Pull the shade (B) from cup (A) as shown in the figure 1.
 4. If lamp still doesn't light, the bulb may be defective. Contact Tensor. Using a twisting motion may help in removing the shade.
 4. When removing bulb for the first time it is necessary to cut the plastic tie holding the bulb in the socket.
 5. Remove the old bulb as shown in the figure 1.
 6. Insert a new bulb into the socket, make sure the end of the is firmly locked into the socket.
 7. Place the shade (B) back onto the cup.




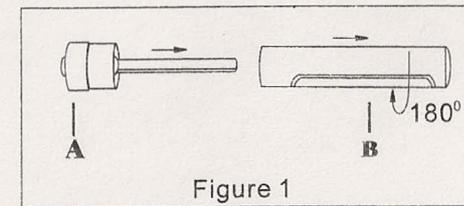


Figure 1

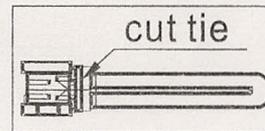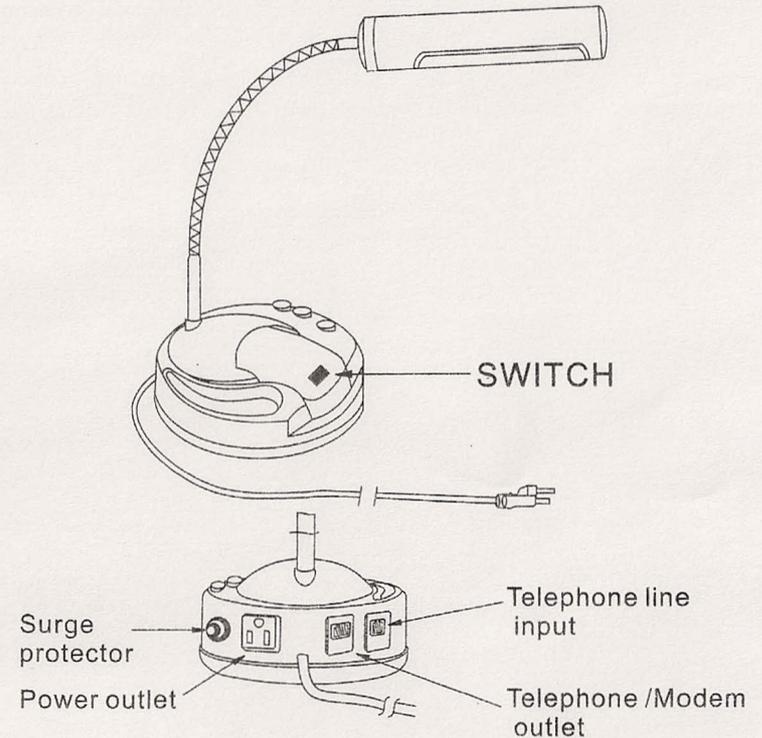

MAINTENANCE:

- Light bulb recommended
Use a 13 Watt PL-type Full Spectrum light bulb.
- To clean, use soft cloth only.
Do not use any chemical or abrasive cleaners.

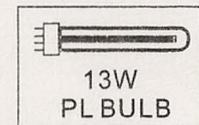

Note: This lamp uses a "Full spectrum" light bulb that produces a light color of 5000K to 6500K. Variation in the light color may cause the light to appear to be slightly different than the original bulb, but you will still receive the benefits of Full Spectrum Lighting. Full Spectrum bulbs produce a brighter and sharper light. Use of a non-Full Spectrum bulb will cause the light to appear different than the original bulb.

Caution: Shade should point in direction of base during use. To bend gooseneck backwards can cause lamp to tip over and can cause damage and injury.

"SAVE THESE INSTRUCTIONS"