


Bates

ROYALL NUMBERING MACHINE

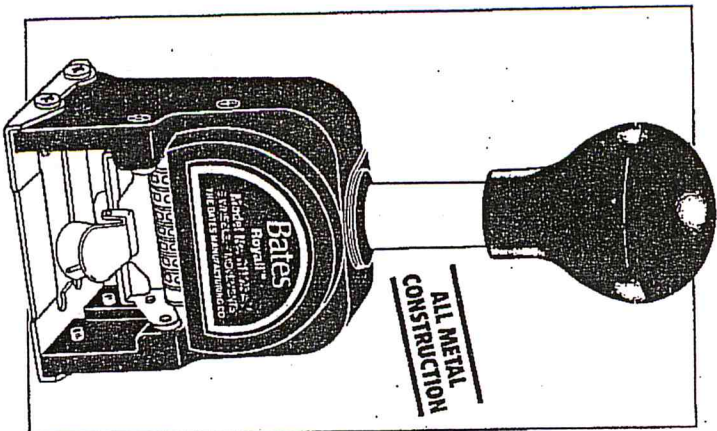

Instructions

To re-ink pad or install new ink pad, press handle (1) half-way down, squeeze thumb tab on Pad Holder (2) and remove. Take the pad out of the holder and ink thoroughly. For best results, ink one side, turn the pad over and ink the opposite side. **DO NOT OVER INK.** Return the pad to the pad holder and replace it in the numbering machine. For best impressions, apply ink to pad several hours prior to use. Always use Bates Numbering Machine Ink.

To change numbering functions on a Bates Royall Numbering Machine, raise the Action Indicator (3) disengaging the gears. Squeeze setting point and slide to the desired position.

The figures on the action indicator identify the following movements:

- 0 - Repeat the same number indefinitely
- 1 - Consecutive 123456789
- 2 - Duplicate* 11 22 33 44... etc.
- 3 - Triplicate* 111 222 333... etc.
- 4 - Quadruplicate* 1111 2222... etc.
- Between 2 & 3 - Sexuplicate* 111111 222222 333333... etc.
- Between 3 & 4 - Twelve Repeats* 111111111111 222222222222... etc.

*NOTE: Be sure any cycle is complete before attempting to reset your Bates Royall Numbering Machine to a different movement. Example: Using a Triplicate movement, do not try to change the movements before completing three full cycles.

To Change Figures

Put the Bates Royall Numbering Machine in a locked position by depressing the handle and slowly releasing, pushing the lock button (5) into the shaft.


If you do not want a column to appear in the impression, turn the next wheel to zero, pressing down slightly, move forward on the zero with the stylus and then return the wheel (still pressing down slightly) back into line with the other numbers. The zero will depress and

the column will not appear in the impression. (NOTE: the first column in the impression cannot be depressed.) Tap the handle gently to release the lock button. The machine is ready for use.

The Guide Plate (6) is designed to allow the numbers to be accurately lined up in a specific position. The indentation on the back of the guide plate prevents the impression from smudging.

DO NOT USE RUBBER STAMP INK

For trouble-free service, use only Bates Numbering Machine Ink.

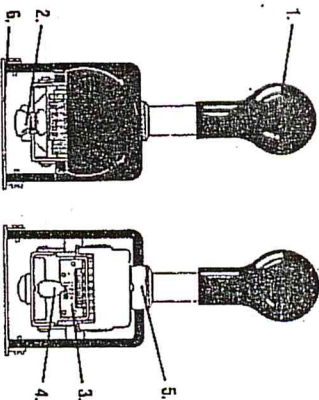

- 1. Handle
- 2. Pad Holder
- 3. Action Indicator
- 4. Setting Point
- 5. Lock Button
- 6. Guide Plate

FOR BEST RESULTS USE ONLY BATES BRAND NUMBERING MACHINE SUPPLIES

Product Code	Description
RP6-7	Dry, Royall Numbering Machine Pads
INK1BU	Numbering Machine Ink, 1 Oz. Blue
INK1BK	Numbering Machine Ink, 1 Oz. Black
INK1RE	Numbering Machine Ink, 1 Oz. Red
NMSP	Number Machine Striking Pad

For almost 100 years Bates has been producing Numbering Machines that originate back to the first Numbering Machines produced by Thomas Edison. Bates manufactures a variety of machines to meet every numbering need including different type style number and daters, and custom made machines. For more information on Bates Numbering Machines at other office supplies, contact your local office supply salesman or call Bates toll free 1-800-477-9900.

Other Bates Products:

- Card Files
- Staplers
- List Finders
- Numbering Machines
- Rulers
- Eyelifters
- Information Processing Supplies

Standard for Excellence

Bates®

General Binding Corporation,
Northbrook, Illinois 60062 USA

INSTRUCTIONS


Bates Numbering Machines are the finest in the world. Developed from a concept first introduced in 1890, thousands of these high quality machines are in use in offices everywhere. For years of smooth, trouble-free operation with a minimum of service, follow these simple instructions.

DO NOT USE STAMP PAD INK

Bates Numbering Machine Ink is specially formulated to lubricate the machine and insure smooth operation. Because other types of ink may corrode or damage the machine, use only Bates Numbering Machine Ink. For added convenience, use Bates Ready Ink Pads — saturated with Bates Ink to provide months of clear impressions.

TO INSERT INK PAD

1. Depress the machine half way toward the printing position. At the same time press the lock button (A) on the neck of the frame. The machine will snap into the locked position.
2. Tilt open the Ink Pad Box (B) by pressing the thumb plate (C) down and slightly outward.
3. Insert the ink pad. For proper functioning, be sure the slanted side of the pad matches the slanted edges of the pad box.

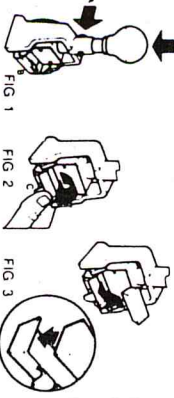

INKING AND RE-INKING

Place the machine in the locked position. Open the pad box and apply ink to the pad. It is not necessary to remove the pad from the machine. DO NOT USE STAMP PAD INK. Use ONLY Bates Numbering Machine Ink.

TO START AT "000001"

Most machines are set to start at "000001" when they are packed. To restart, follow this procedure:

1. Put machine in locked position
2. Using the wooden stylus provided, bring the "0" on each wheel to the printing line.

TO DEPRESS "0"

(Special Order Feature Only)

1. Press the point of the stylus in the center of the "0".
2. Move the wheel forward until the "0" passes the printing line and depresses into the barrel.
3. While keeping the "0" depressed, move the number wheel back until the "0" is on the printing line.
4. The "0", now depressed below the normal printing level, will automatically snap into position when "0" is required in the normal numbering sequence.

TO OPERATE MACHINE

Use on a firm level surface. Press handle down with strong wrist action. Do not pound the machine.

TO CLEAN

The numbering wheels should be cleaned occasionally with a brush and cleaning solution. Use a light grade of oil on working parts.

WIDE FRAME NUMBERING MACHINES

Pad boxes on Wide Frame Numbering Machines do not tilt. In the locked position there is sufficient space to insert a pad or to apply ink.

REPAIRS AND SERVICE

For service or repairs, return the Bates Numbering Machine to your dealer or directly to the Bates Service Department.

IN BACK OF MACHINE YOU CHANGE CURP TO REPEAT

OF TIMES NEEDED.

NO TO 12 TIMES.

INSTRUCTIONS D'EMPLOI


Les Numéroteurs Bates sont les meilleurs du monde. Développés à partir d'un concept introduit en 1890, des milliers de ces machines de haute qualité sont maintenant utilisées pratiquement dans tous les bureaux du monde. Afin d'assurer un fonctionnement sans ennui et avec un minimum d'entretien, suivez les simples instructions suivantes.

NE JAMAIS UTILISER D'ENCRE A TAMPON

L'Encre de Numéroteur Bates est spécialement formulée pour lubrifier la machine et assurer un fonctionnement sans problème. N'utiliser que de l'encre Bates, car tout autre type d'encre pourrait créer une corrosion ou endommager la machine. Pour une opération encore plus simple, utiliser les tampons encres Bates prêts à l'emploi — saturés d'encre Bates. Ils permettent d'obtenir des impressions parfaitement nettes pendant plusieurs mois.

COMMENT PLACER LE TAMPON ENCREUR

1. Appuyer sur la machine jusqu'à ce qu'elle soit à mi-chemin de sa position d'impression. Appuyer simultanément sur le bouton de verrouillage (A) placé sur le cadre de support. La machine sera ainsi automatiquement verrouillée en position.
2. Ouvrir le Boîtier du Tampon Encreur (B) en pressant sur la plaque de fermeture (C) vers le bas et légèrement vers l'extérieur.
3. Placer le tampon encreur. Il faudra faire attention à placer le côté oblique du tampon contre les bords obliques de boîtier.

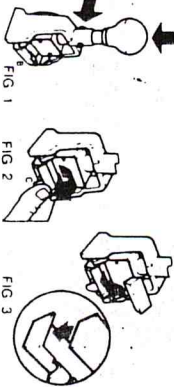

ENCRAGE ET RE-ENCRAGE

Placer la machine en position fixe (verrouillée). Ouvrir le boîtier à tampon et mettre de l'encre sur

le tampon. Il n'est pas nécessaire de sortir le tampon du boîtier. NE JAMAIS UTILISER D'ENCRE A TAMPON ORDINAIRE. N'utiliser QUE l'Encre de Numéroteur Bates.

COMMENCER SUR "000001"

La plupart des machines sont réglées pour commencer à "000001" au moment de l'emballage. Pour revenir, suivre ces instructions:

1. Placer la machine en position verrouillée.
2. Avec la pointe en bois fournie, amener le "0" sur chaque roulette de la ligne d'impression.

AFFAISER LE "0"

(Commande Spéciale Seulement)

1. Appuyer la pointe au centre du "0".
2. Faire rouler la roulette vers l'avant jusqu'à ce que le "0" passe la ligne d'impression et s'affaisse dans le barillet.
3. Tout en gardant le "0" en position affaïssée, faire tourner la roulette de numéros en marche arrière jusqu'à ce que le "0" soit sur la ligne d'impression.
4. Le "0" étant maintenant affaïssé au dessous du niveau normal d'impression, reviendra automatiquement en position lorsque le "0" sera nécessaire dans la séquence de numérotation.

FONCTIONNEMENT DE LA MACHINE

Utiliser la machine sur une surface ferme et plane. Appuyer sur la poignée d'un mouvement ferme du poignet. Ne pas taper la machine sur la surface de support.

NETTOYAGE

Les roulettes de numérotation devront être nettoyées de temps à autre avec une brosse et un liquide de nettoyage. Utiliser une huile de graissage légère pour les pièces de travail.

MACHINE DE NUMÉROTATION A CADRE DE SUPPORT LARGE

Les boîtiers à tampon de ces modèles particuliers ne s'ouvrent pas. En position verrouillée l'espace libre est suffisamment grand pour introduire un nouveau tampon ou mettre de l'encre.

REPARATIONS ET ENTRETIEN

Pour toute réparation ou entretien, renvoyer le Numéroteur Bates à votre revendeur ou directement à notre Service d'Entretien.